

PROTOS

150/275

ENG	INSTALLATION INSTRUCTIONS	ITA	ISTRUZIONI DI INSTALLAZIONE	NLD	INSTALLATIE INSTRUCTIES	DAN	INSTALLATIONSVEJLEDNING	HUN	TELEPÍTÉSI ÚTMUTATÓ
DEU	INSTALLATIONSANLEITUNG	POL	INSTRUKCJE MONTAŻU	RUS	Инструкции по установке	RON	INSTRUCȚIUNI DE INSTALARE	CHI	安装说明
FRA	INSTRUCTIONS DE MONTAGE	SPA	INSTRUCCIONES DE INSTALACIÓN	POR	INSTRUÇÕES DE INSTALAÇÃO	SWE	INSTALLATIONSANVISNING	UKR	Інструкції з монтажу
SRP	UPUTSTVA ZA INSTALACIJU	AR	تعليمات التركيب						



IP

67

IK

06

Control gear must be SELV/PELV!

$U_{out\ max}=120V$




12-24VDC



6




20

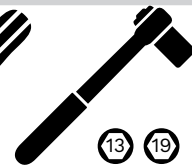

13


19

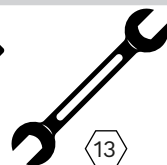

13

ALL THE TIGHTENING TORQUES VALUES ARE GIVEN FOR ASSEMBLIES WITHOUT THE ADDITION OF A GREASE DECREASING FRICTION.

PARTS LIST

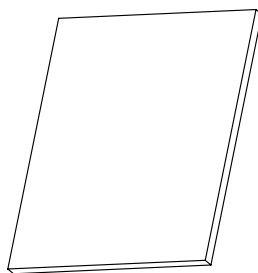

1x



1x



 
1x



2x



1x



1x



A-8x



B-4x



C-12x



D-8x



E-8x



F-4x



K-4x



G-4x




H-4x




J-6x

INSTALLATION STEPS


1

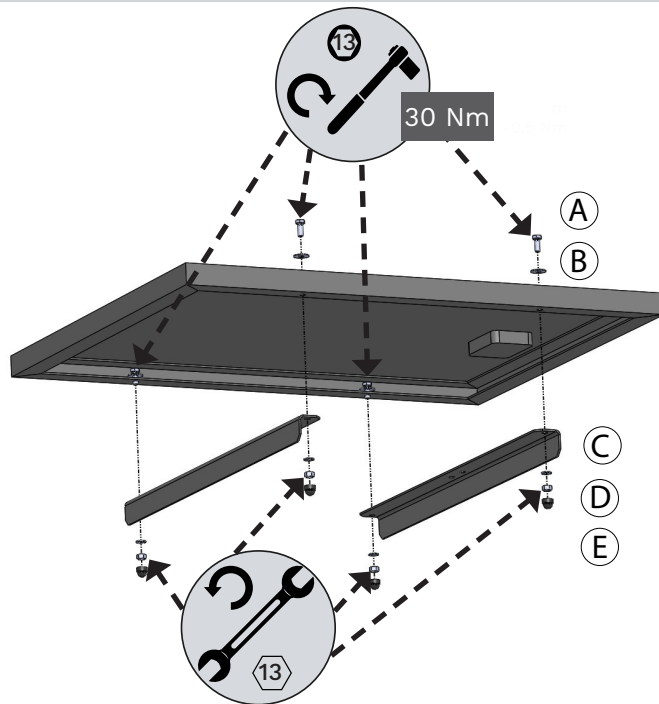

2

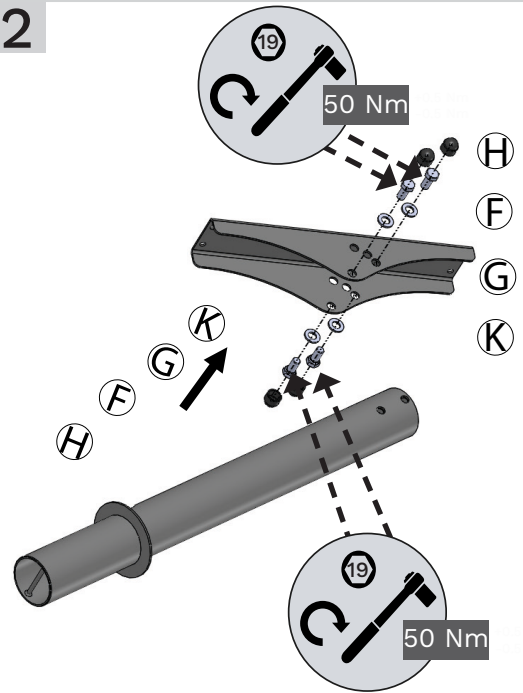


3a

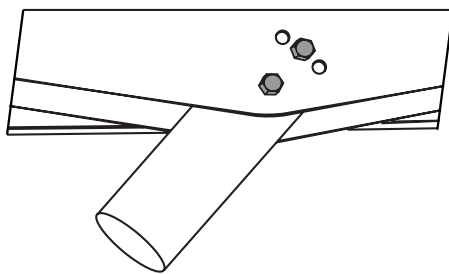


40°

4

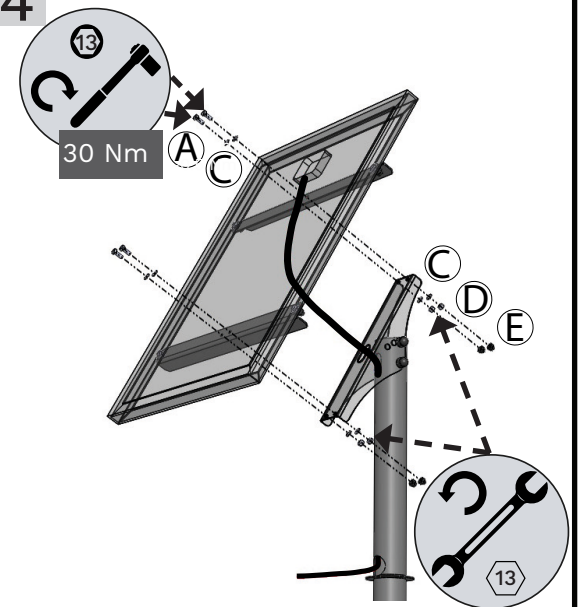


3b

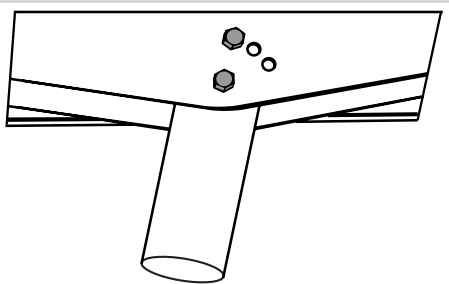


15°


5

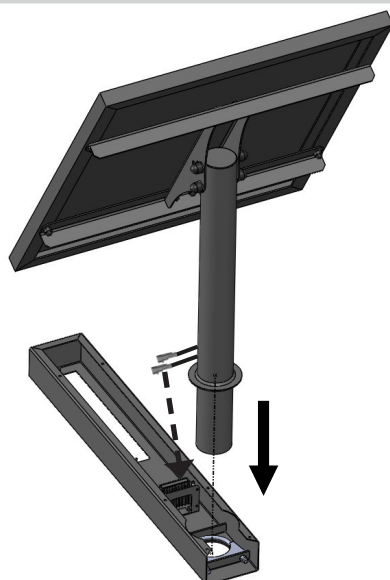


6

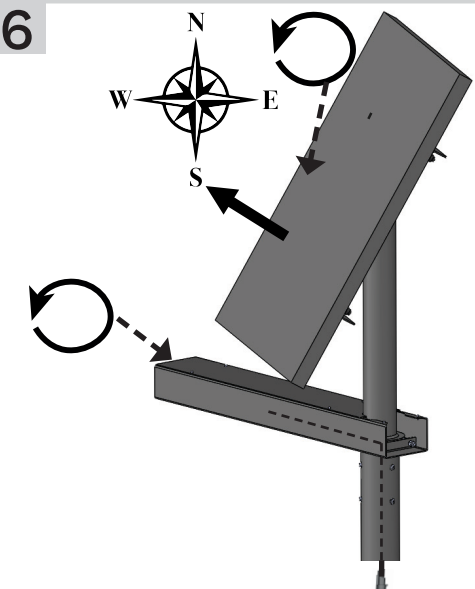


7

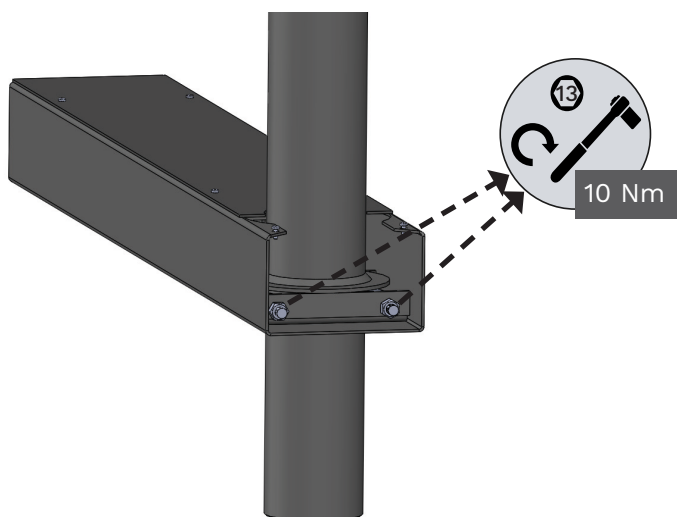


8

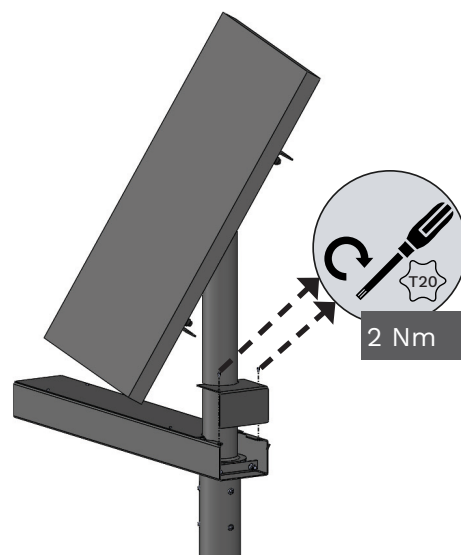


9

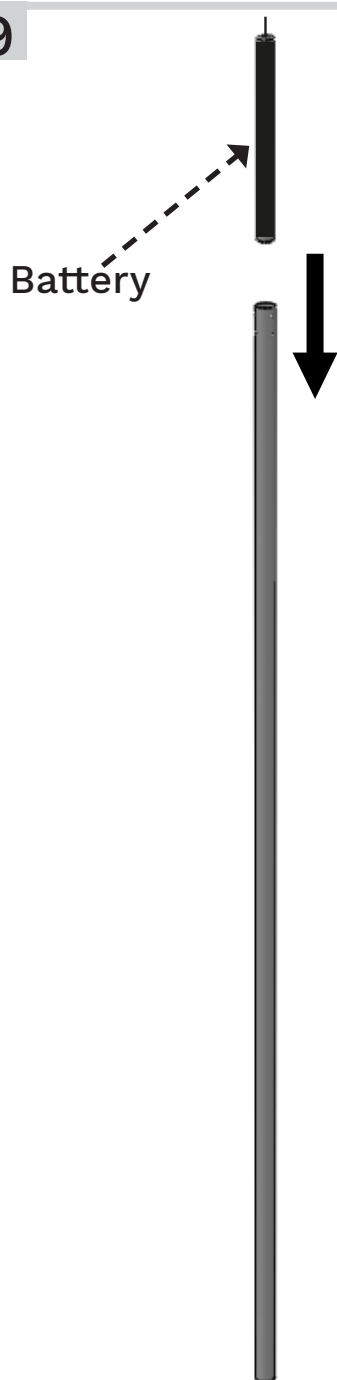


10

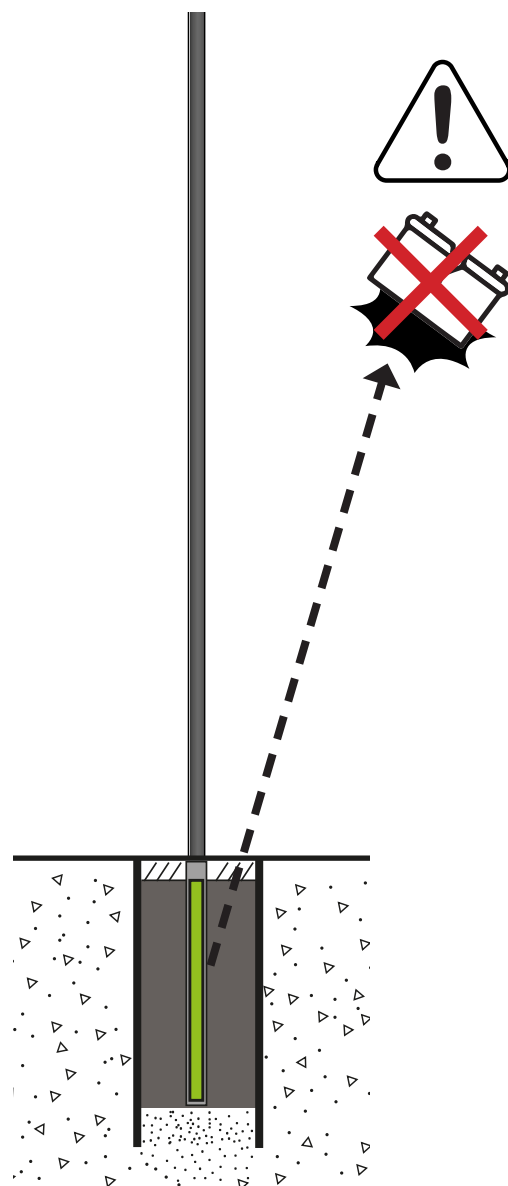


11

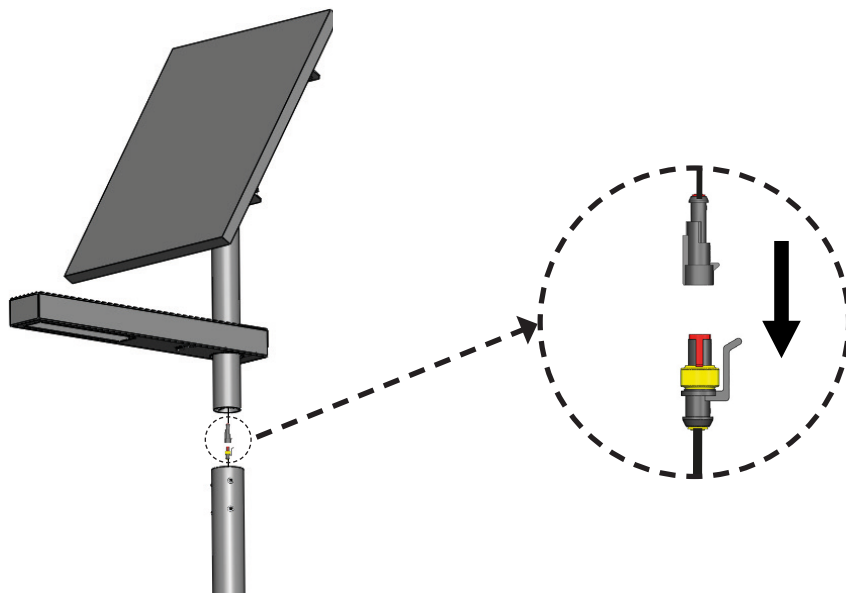


12

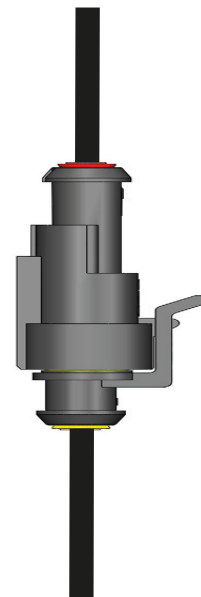




13

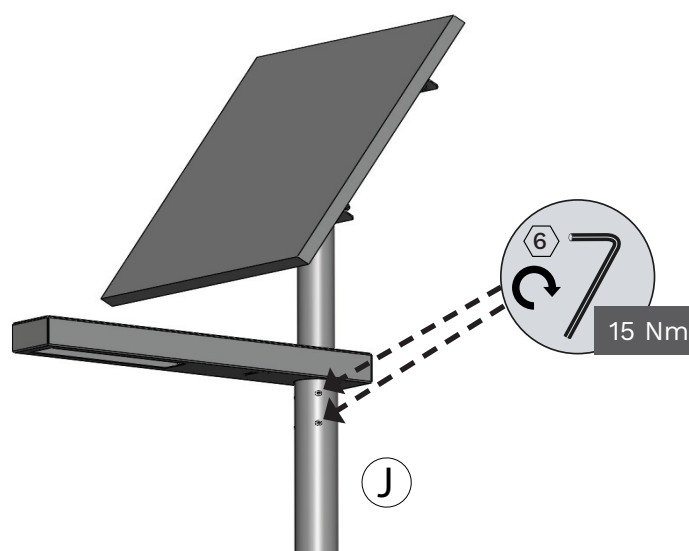

MOUNTING OPTION 1 - PIPE FOUNDATION

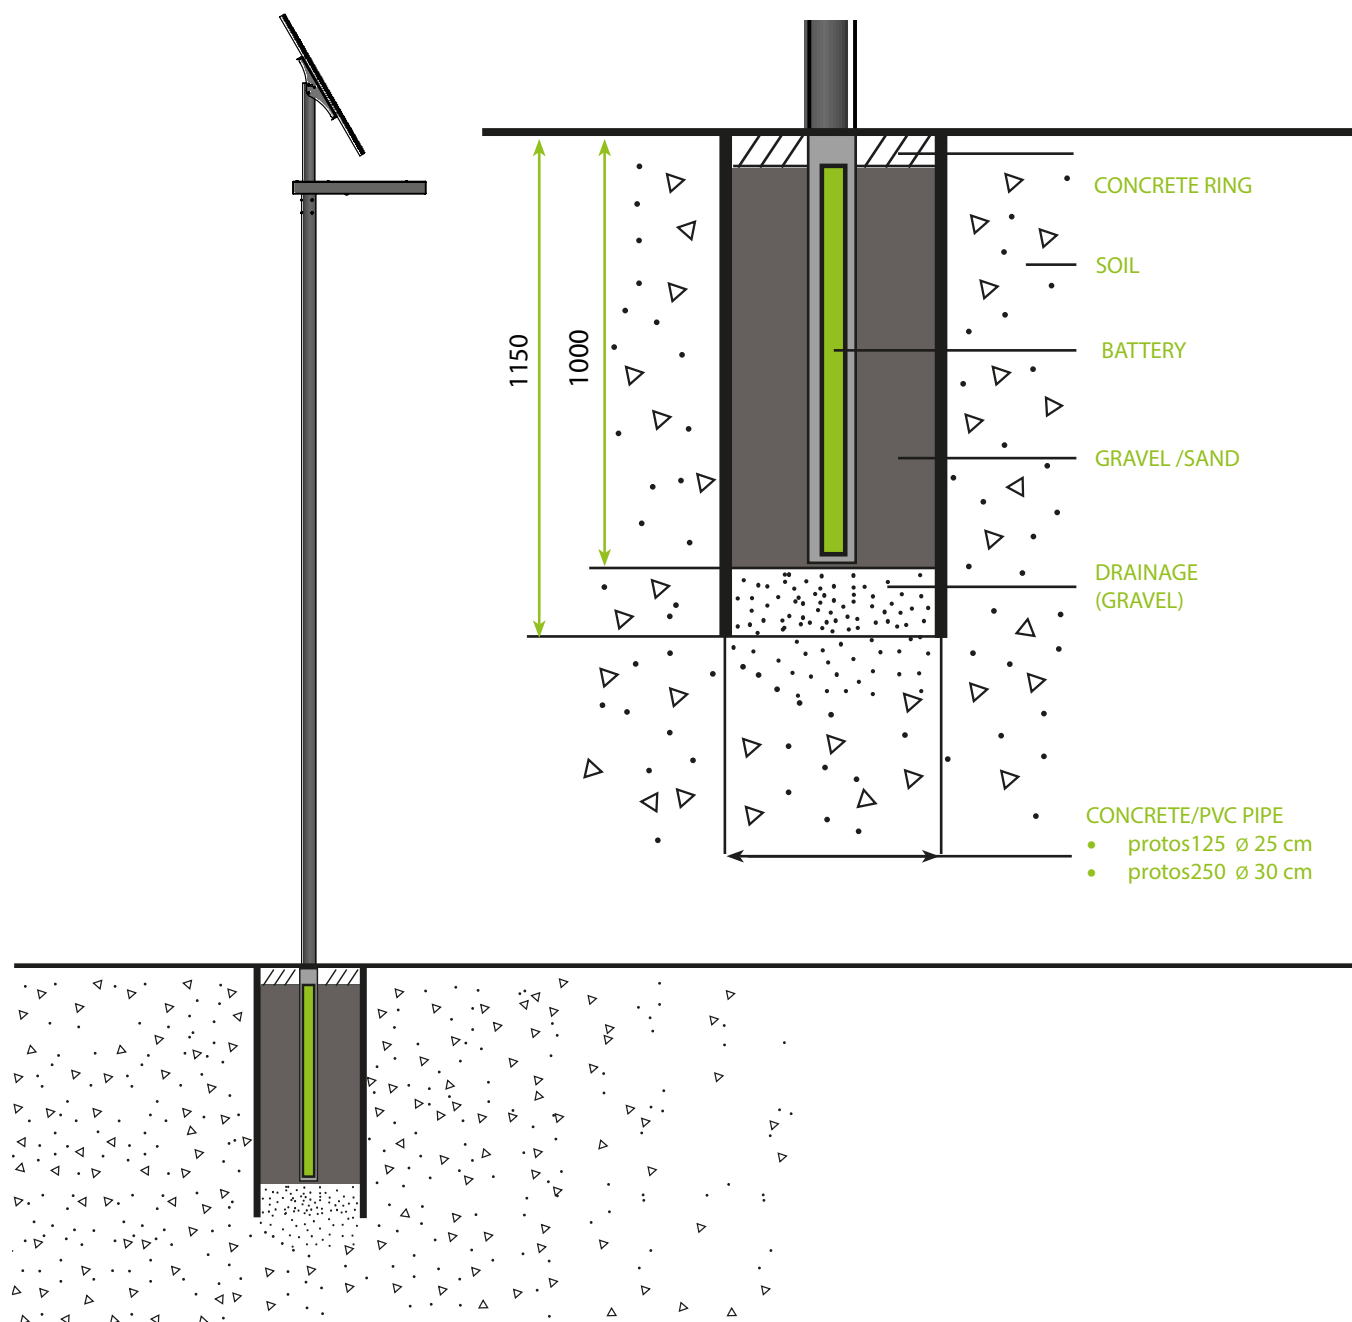


MOUNTING OPTION 2 - ANCHOR BASE

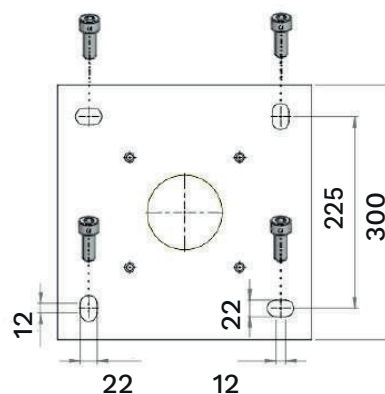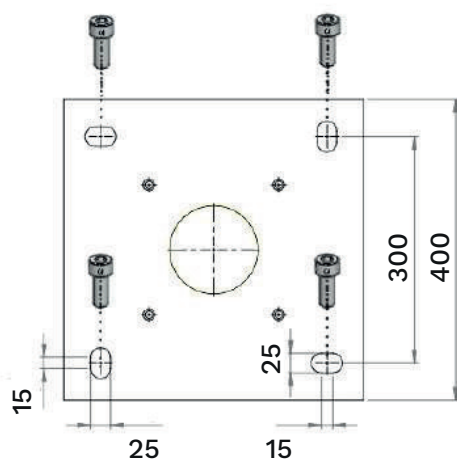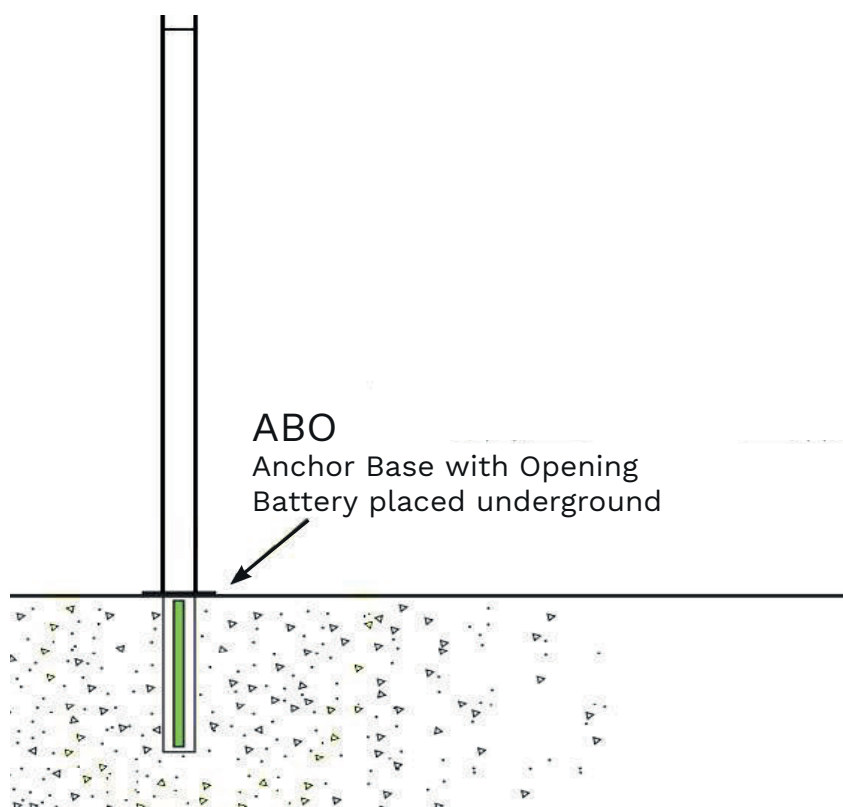

MOUNTING OPTION 3 - GROUND SCREW FOUNDATION

POLE DIAMETER 89 mm - PROTOS 150
POLE DIAMETER 133 mm - PROTOS 275

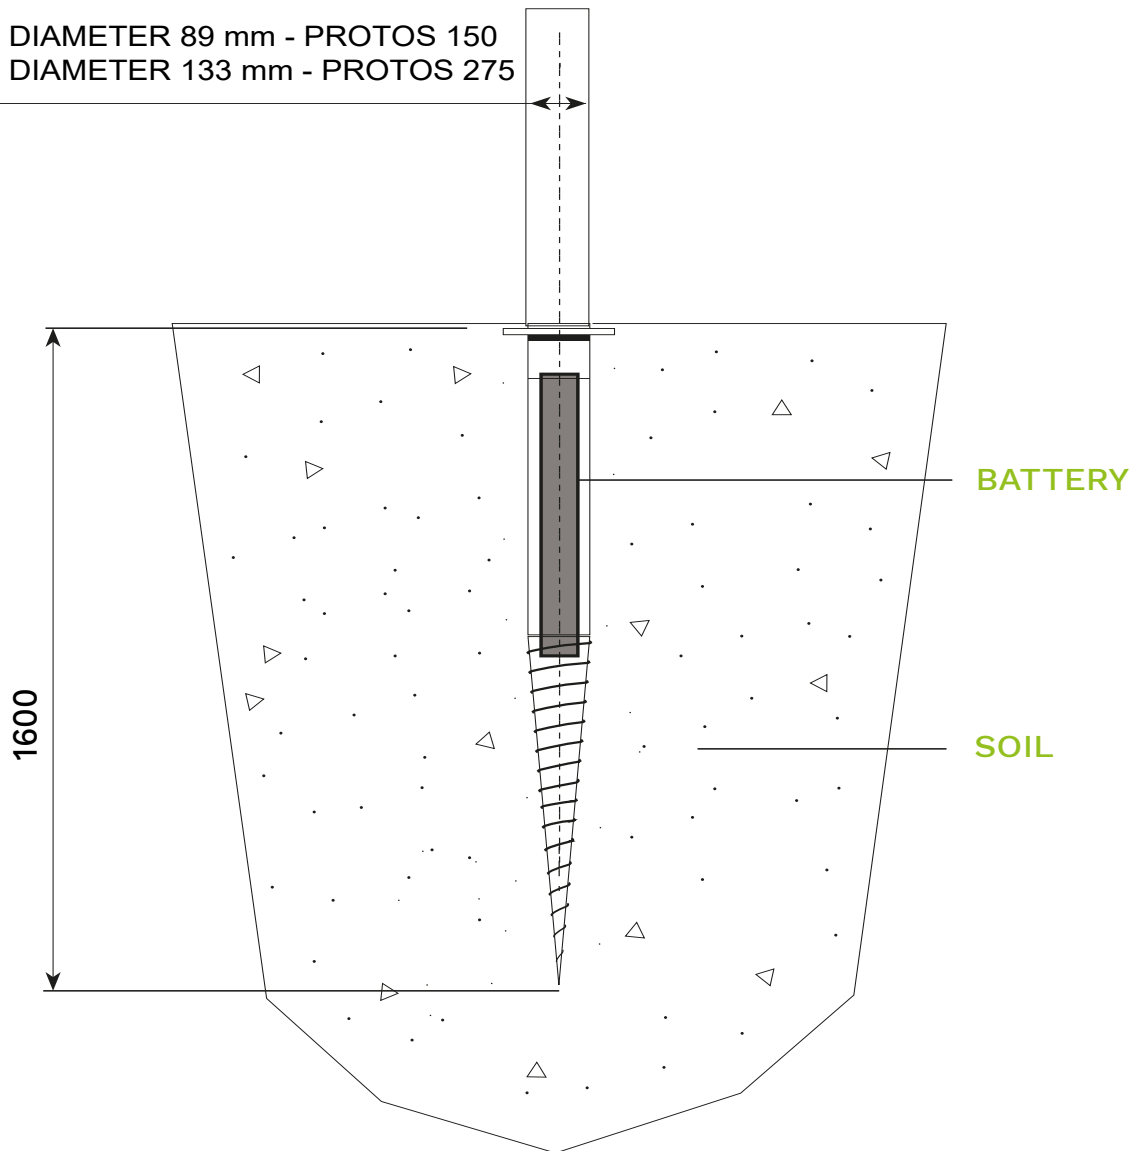

Please consult your Schröder expert before installation!